



PowerView™ Model PV780

Installation Manual

In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time. The latest version of this manual can be found at www.fwmurphy.com.

Warranty - A limited warranty on materials and workmanship is given with this Murphy product. A copy of the warranty may be viewed or printed by going to <http://www.fwmurphy.com/warranty>.



Please read the following information before installing.

**BEFORE BEGINNING INSTALLATION OF THIS MURPHY
PRODUCT:**

Read and follow all installation instructions.

Please contact Enovation Controls immediately if you have any questions.

Table of Contents

Hardware Installation.....	1
Inspecting Package Contents.....	1
Dash-Mounted Installation.....	1
RAM™ Mount Option	3
Wiring Information	4
Pin Out Specifications	4
Wiring Schematics – Black Connector	5
Wiring Schematics – Grey Connector	6
Specifications	7

(THIS PAGE INTENTIONALLY LEFT BLANK)

Hardware Installation

The following instructions will guide you through installing the PowerView display.

Inspecting Package Contents

Before attempting to install the product, it is recommended that you ensure all parts are accounted for and inspect each item for damage (which sometimes occurs during shipping). The items included in the box are:

PV780 unit

Installation kit – P/N 78-00-0638 includes:

- 4 ea. machine screws and flat washers
- 4 Nylock nuts
- Installation & Operations manual web reference insert

Dash-Mounted Installation

Tools needed.

- Drill with 5/32" size bit
- Jig Saw
- Wrench or socket 6-32 Nylock nuts (provided) to studs

Preparing the Dash

Determine the location of the PowerView in the dash. Use the Installation Template (included at the end of the manual) as a guideline to cut a hole in the dash to the specified dimensions. Drill holes where indicated on the template for the mounting screws.

NOTE: When using the paper template from the manual, if you downloaded this document from the FW Murphy website, be aware that the pdf file may not automatically print to scale. When submitting the file for print, you will need to select "None" for Page Scaling. Check the accuracy of the printed template by verifying the measurements labeled on the template are correct.

If this manual was supplied with your product, the template will be correct.

Mounting the Unit

1. Place the back side of the display through the opening in the dash.
2. Use the four screws to line up the unit with the drilled holes.
3. Push the unit through the opening and screws through the drilled holes until the back of the case is flush.
4. Use the Nylock nuts provided to tighten unit to the dash. Use the appropriate wrench or socket to tighten. Torque lock nuts to 8-10 inch pounds.

Flush Mounting the Dash


1. Cut the dash to allow for the display without bezel. Ensure x amount of materials is available to ensure the display is properly secured within the dash. Torque the 6-32 Nylock nuts to 5 inch pounds.
2. Place the display behind dash and line up the four mounting holes on the display with the holes in dash.
3. Install four bolts and tighten nuts.

RAM™ Mount Option



Support Bracket

Murphy designed a special bracket to support the PV780 display with RAM mount C size components.

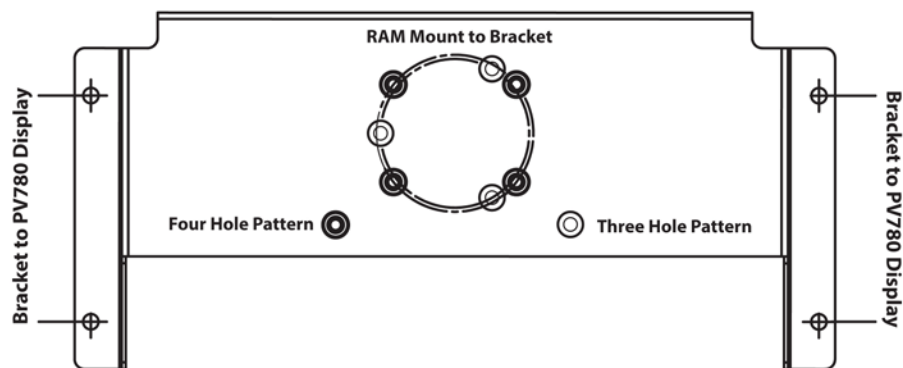

PV780 Bracket for RAM Mount Option		
Part Number	Description	Order Details
787001053	Bracket and Screw Kit for PV780 Display (RAM mount not included)	Call your regional sales office or Account Manager.

RAM™ Mounts


The following mount accessories may be used with our Bracket and Screw Kit 787001053.

RAM Mount Options for PV780		
Part Number	Description	Order Details
RAM-101U-B	(2) 1.5" Balls with 2.25" Arm	Order on website; http://tinyurl.com/mdo3yru
RAM-101U	(2) 1.5" Balls with 4.5" Arm	
RAM-101U-D	(2) 1.5" Balls with 9" Arm	
RAM-202U	1.5" Ball	
RAM-201U	4.5" Arm	
RAM-201U-D	9" Arm	
RAM-103U-B	1.5" Ball with 2.25" Arm	
RAM-103U	1.5" Ball with 4.5" Arm	

Wiring Information


Pin Out Specifications

PV780

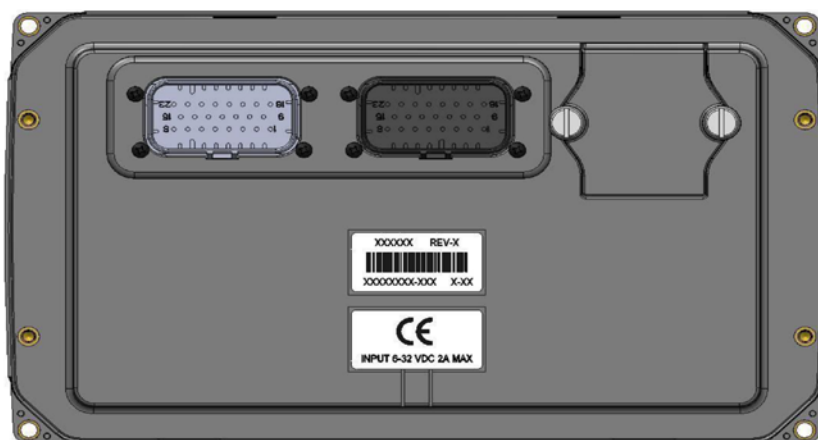

Connector 2 (Gray)


1	Video Input 1	NTSC/PAL Signal 1
2	Video Input 2	NTSC/PAL Signal 2
3	Video Input 3	NTSC/PAL Signal 3
4	RS-485 High	Data + (B)
5	RS-485 Low	Data - (A)
6	-	No Connect
7	-	No Connect
8	-	No Connect
9	Video Input 1 Ground	
10	Video Input 2 Ground	
11	Video Input 3 Ground	
12	USB ID	Host (grounded); Slave (not connect)
13	Frequency Input	
14	Frequency Return	
15	-	No Connect
16	USB D-	White (Data -)
17	USB D+	Green (Data +)
18	USB 5V	Red (+5V)
19	USB Ground	Black
20	USB Shield	
21	-	No Connect
22	-	No Connect
23	-	No Connect

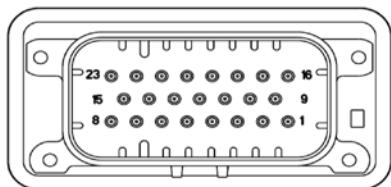

View looking at back of the display
Mating connector P/N: AMP 770680-4

Connector 1 (Black)

1	Digital Input 1	Discrete digital; active high
2	Analog Input 3	0-5V; 4-20mA; resistive analog
3	Analog Input 2	0-5V; 4-20mA; resistive analog
4	Analog Input 1	0-5V; 4-20mA; resistive analog
5	CAN1 L	Green
6	CAN1 H	Yellow
7	Battery	Red (Unswitched 12/24V)
8	Ground	Black (Common)
9	Analog Input 3 Ground	Black (Common with Ground)
10	Analog Input 2 Ground	Black (Common with Ground)
11	Analog Input 1 Ground	Black (Common with Ground)
12	Digital Input 3	Discrete digital; active high
13	Digital Input 2	Discrete digital; active high
14	Frequency Output 1	0-10kHz
15	Ignition In	Ignition (Switched 12/24V)
16	-	No Connect
17	-	No Connect
18	CAN2 L	Green
19	CAN2 H	Yellow
20	Digital Input 4	Discrete digital; active high
21	Digital Input 5	Discrete digital; active high
22	Digital Output	Switched low-side, 500mA
23	-	No Connect

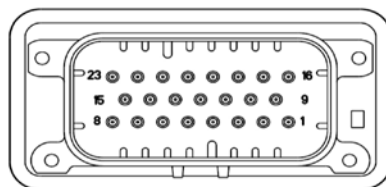

View looking at back of the display
Mating connector P/N: AMP 770680-1

Signal Definitions

CAN: 3 ports according to CAN specification 2.; 1 port isolated according to NMEA 2000 USB 2.0 host Video input (optional): NTSC/PAL Inputs (3) 0-5 VDC analog inputs, (1) input configurable to support measurement frequencies from 2 Hz - 10kHz values from 0-100% duty cycle Output: Digital, capable of sinking 500mA.


Wiring Schematics – Black Connector



WARNING: Failure to install the unit per the specified wiring diagrams may cause damage to the unit. **DO NOT** connect power to the video ground. Warranty is void for damage caused by incorrect wiring.

J1 (BLACK CONNECTOR)


Analog Inputs

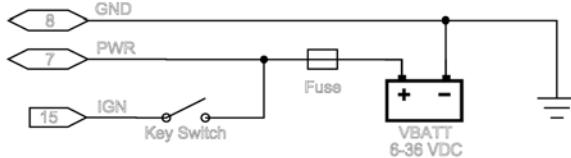

NOTES:

- Mating connector AMPSEAL 770680-1 plug with 770654-3 sockets
- Use 20 to 16 AWG (0.5 to 1.4 mm²)
- Wire diameter of 1.7 to 2.7 mm.
- Install seal plug 770678-1 in perforated connector wire cavities
- Use 5A Slow Blow Type Fuse


Communications (CAN 2.0A/B)

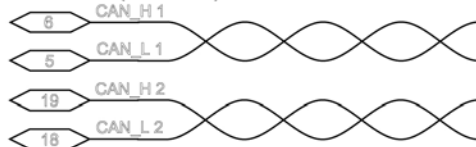


Wire per J1939-11 (STP) or J1939-15 (UTP)

- J1939-11: Keep stub <1m length; up to 30 nodes; 40m max length
- J1939-15: Keep stub <3m length; up to 10 nodes; 40m max length
- Locate display node >0.1m from nearest node
- Space nodes unequally
- Keep CANbus trunk as linear as possible
- Type I - Use external 120 ohm terminator
- Type II - Enable Internal terminator


Analog Inputs

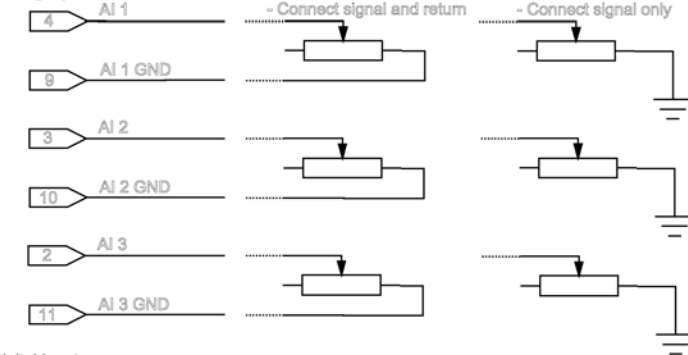


0-5 VDC Sensors

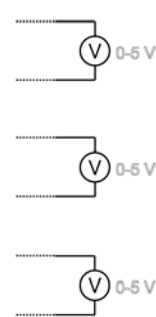


4-20 mA Sensors

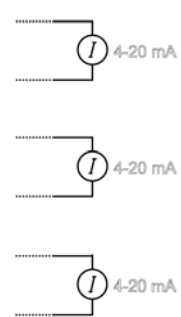


Digital Inputs

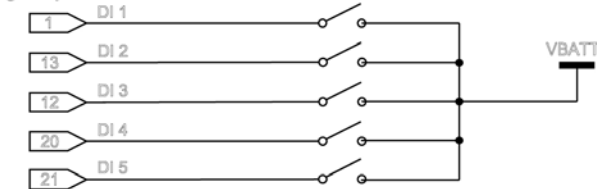

Digital Output

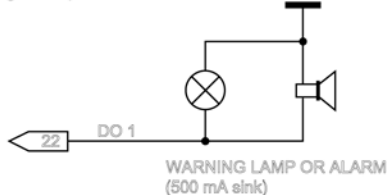

Frequency Output

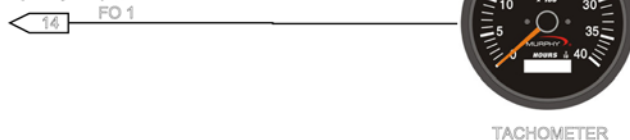

Wiring Schematics – Grey Connector




WARNING: Failure to install the unit per the specified wiring diagrams may cause damage to the unit. **DO NOT** connect power to the video ground. Warranty is void for damage caused by incorrect wiring.

J2 (GREY CONNECTOR)

NOTES:

- Mating connector AMPSEAL 770880-4 plug with 770854-3 sockets
- Use 20 to 16 AWG (0.5 to 1.4 mm²)
- Wire diameter of 1.7 to 2.7 mm.
- Install seal plug 770878-1 in perforated connector wire cavities

USB (Programming and Data Logging)

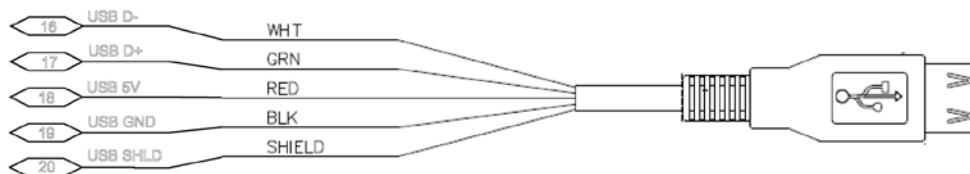


Video Inputs



VIDEO CAMERA NOTES

- NTSC or PAL format
- Do not mix camera types
- Follow camera manufacturer specifications for power
- Do not power camera using VIDEO GND

Frequency Input (Engine or Shaft Speed from mag pick-up)

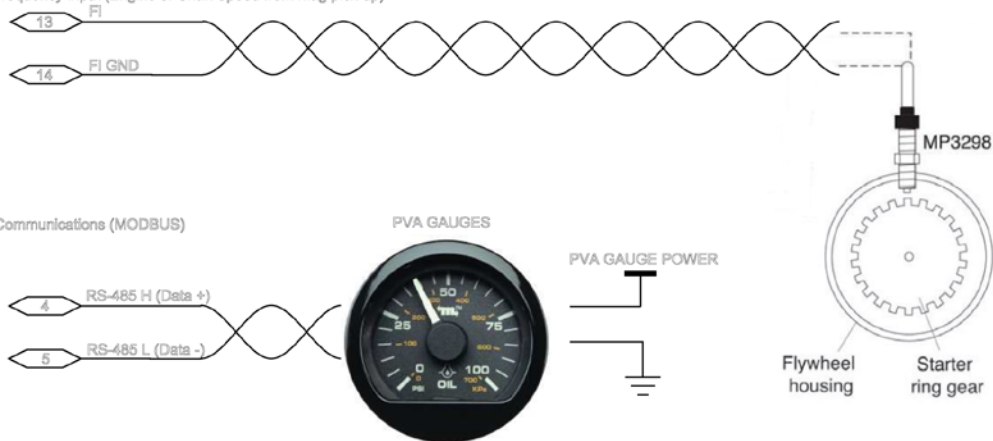

Communications (MODBUS)



Specifications

Electrical

Display	7" / 178mm color transmissive TFT LCD
Resolution	WVGA, 800 x 480 pixels, 16-bit color
Aspect Ratio	16:9
Orientation	Landscape or portrait
Backlighting	LED, 1000 cd/m2 (40,000 hours lifetime)
Microprocessor	Freescale™ i.MX357, 32bit, 532 MHz
Operating System	QNX® Real-time Operating system
Flash Memory	2 GB
RAM	128 Mbytes SRAM
Clock	Real-time clock with battery back-up
Operating Voltage	6 - 36 VDC, protected against reverse polarity and load-dump
Power Consumption	10 W full brightness 22 W full brightness with heater (< -10° C)
CAN	(2) CAN ports according to CAN specification 2.0B. 10kbps – 1Mbps
RS-485	(1) MODBUS RTU Master / Slave port or PVA gauges
Protocols	J1939, NMEA 2000 (GPS), CAN open, Free Form CAN
Connection	(2) AMPSEAL 23 pin (mating connectors)
Pushbuttons	(10) Tactile
USB	(1) USB 2.0 host (full speed)
Inputs	(3) 0-5 VDC analog inputs or resistive (1) frequency input configurable to support measurement frequencies from 2 Hz-10 kHz (5) discrete digital (active high)
Video Inputs	(3) NTSC/PAL (individually viewed channels)
Outputs	(1) 500mA; switched low-side, (1) frequency output to drive tachometer
Immunity	SAE J1113
Emissions	SAE J1113
Mounting Options	Front mount with bezel, back mount without bezel, optional bracket for RAM™ mount
CE Marking	<ul style="list-style-type: none"> • Quality Standard: ISO 9001 • Directive: 2004/108/EC (European Electromagnetic Compatibility) • European Harmonised standard: <ul style="list-style-type: none"> ○ EN 61000-4-3 (RADIATED EMF IMMUNITY) ○ EN 61000-4-4 (EFT IMMUNITY POWER and I/O LINES) ○ EN 61000-4-5 (SURGES POWER LINES) ○ EN 61000-4-6 (RF IMMUNITY) ○ EN 61000-4-8 (MAGNETIC FIELD IMMUNITY) ○ EN 60945 (ESD) ○ EN60945 (CONDUCTED EMISSIONS) ○ HYBRID EN60945 CISPR 11 CLASS B (RADIATED EMISSIONS)


Environmental

Operating Temperature	-40° C to +85° C
Storage Temperature	-40° C to +85° C
Protection	IP66 and 67, front and back
Vibration	Random vibration, 7.86 Grms (5-2000Hz), 3 axis
Shock	± 50G in 3 axis


Mechanical

Dimensions	(W x H) 8.37 x 6.0 in (212.5 x 152.3mm) landscape Unit Depth – 3.57 in (90.8mm)
Shipping Weight	Approximately 2.5 lbs. (1.13 kg)
Case Material	PC+ABS (meets FMVSS 302 flammability)

Dimensions for Installation

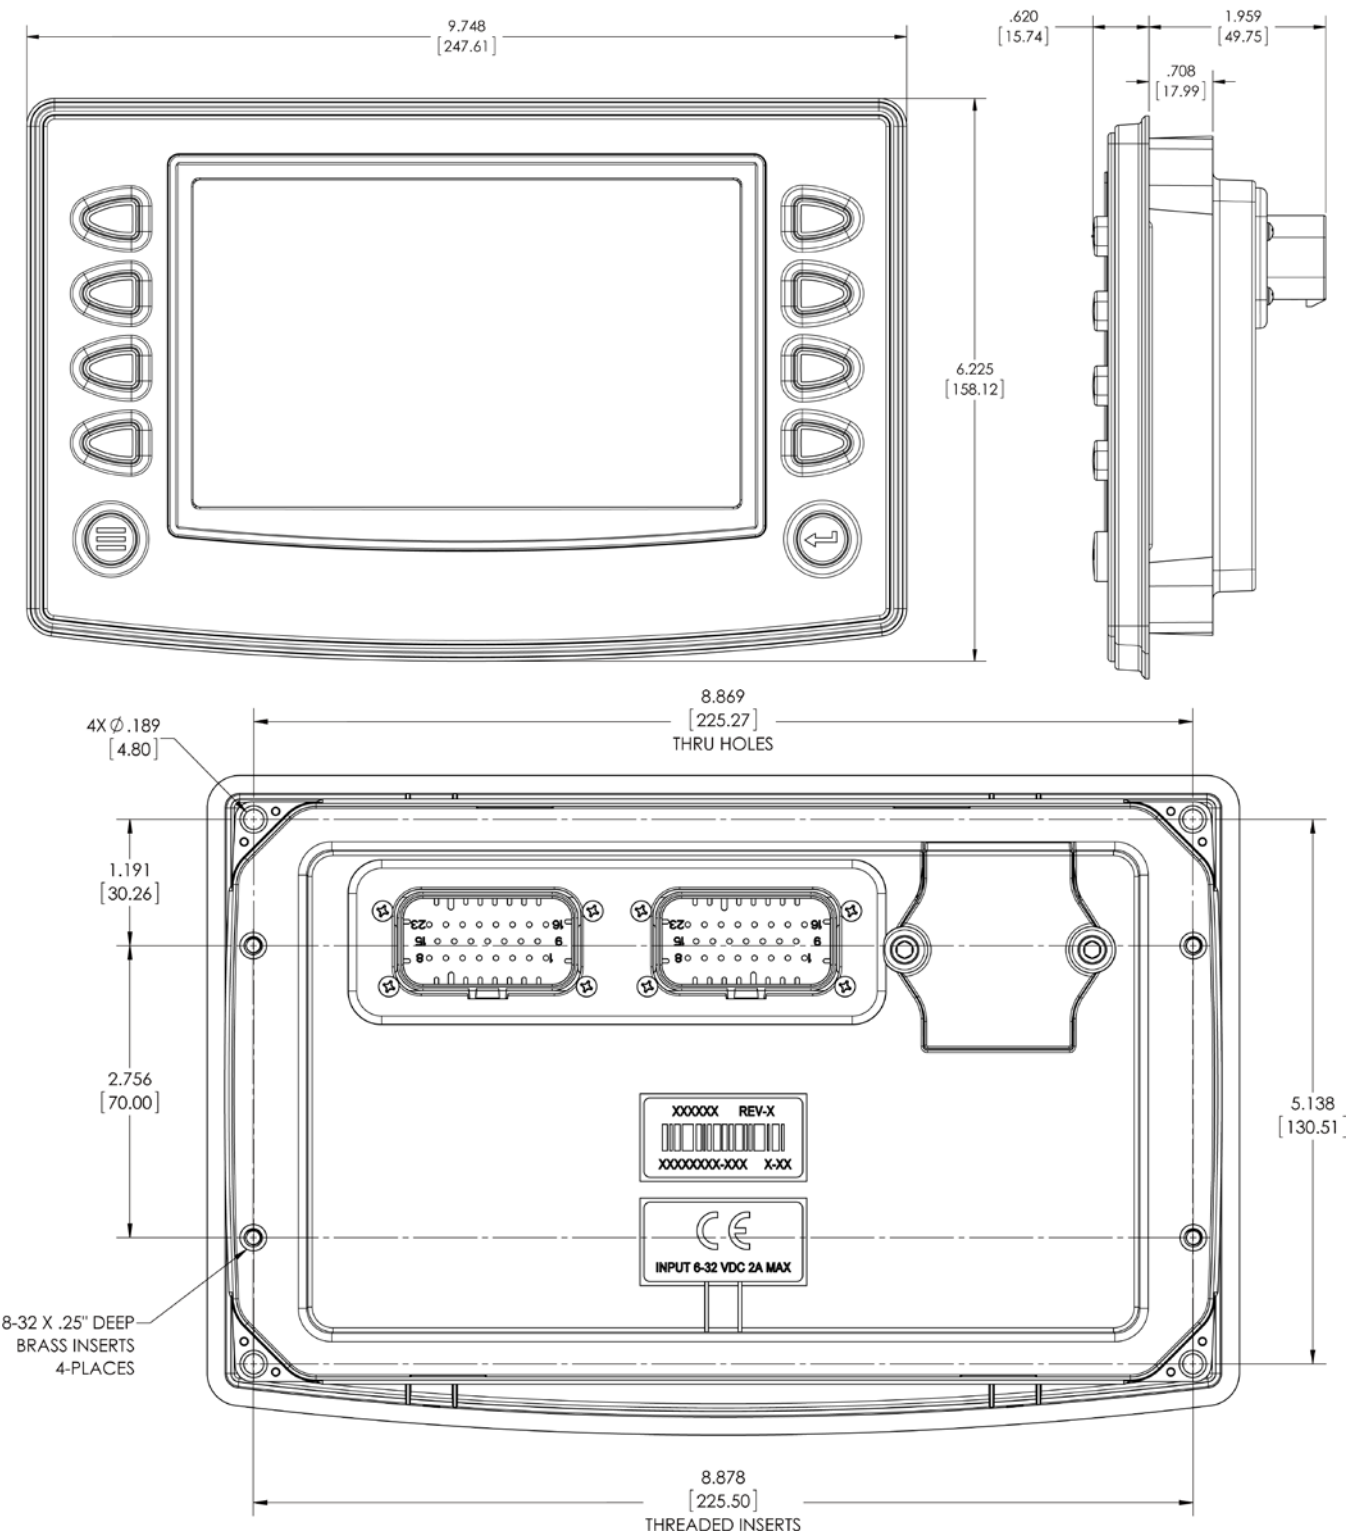

(THIS PAGE INTENTIONALLY LEFT BLANK)

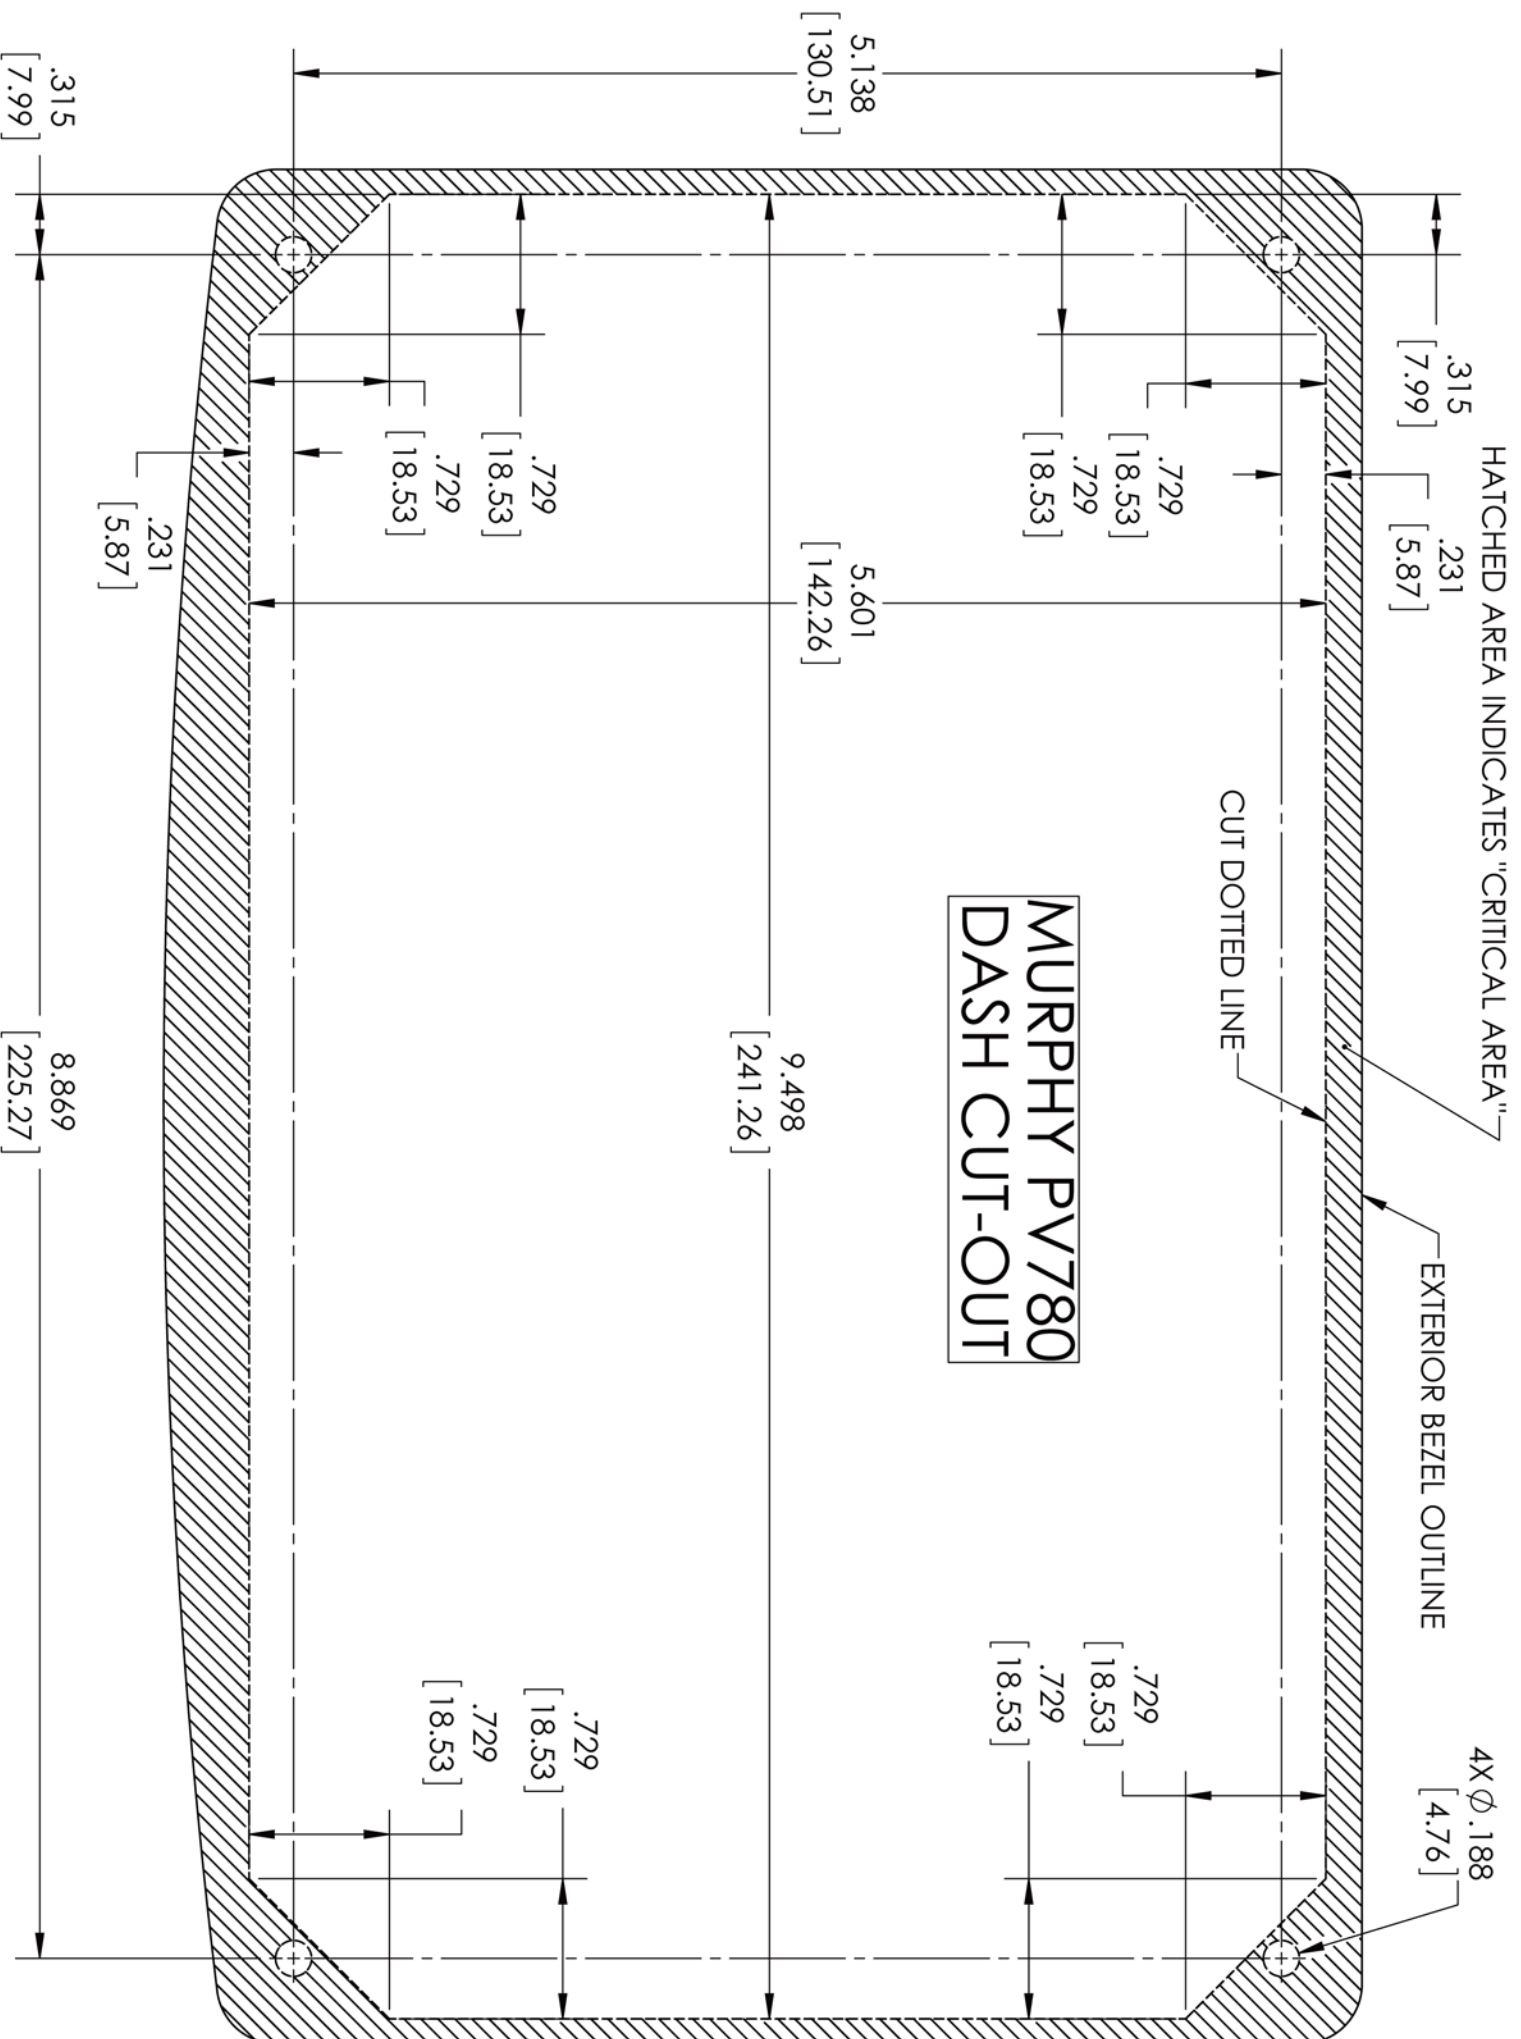

(THIS PAGE INTENTIONALLY LEFT BLANK)

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time. MURPHY products and the Murphy logo are registered and/or common law trademarks of Enovation Controls, LLC. This document, including textual matter and illustrations, is copyright protected by Enovation Controls, LLC, with all rights reserved. (c) 2013 Enovation Controls, LLC. A copy of the warranty may be viewed or printed by going to <http://fwmurphy.com/warranty>.



北京

信德迈科技(北京)有限公司 CNMEC Technology

地址：北京市朝阳区安贞桥胜古中路2号金基业大厦201室

邮编：100029

*Tel: 010-8428 2935 | * Fax: 010-8428 8762

*手机：139 1096 2635

*电子邮件：sales@cnmec.biz

主页：<http://www.cnmec.biz>